

 
**Cranefoot CF540**

**Operating Guidelines**


**18.05.15**

The CF540 outrigger pads have a Rated Working Capacity (RWC) of 16 tonnes. They are designed to be used on suitable level surfaces in accordance with the Mobile crane code 2006, AS1418.5, AS2550.5

In areas where soft or wet soils are encountered, or sinking is experienced, (e.g. wet clay or loose sand), alternative packing (e.g. hardwood sleepers) may be required to create a larger bearing area to ensure the pressure applied to the ground does not exceed the soils load bearing capacity. (Refer Mobile Crane Code 2006)

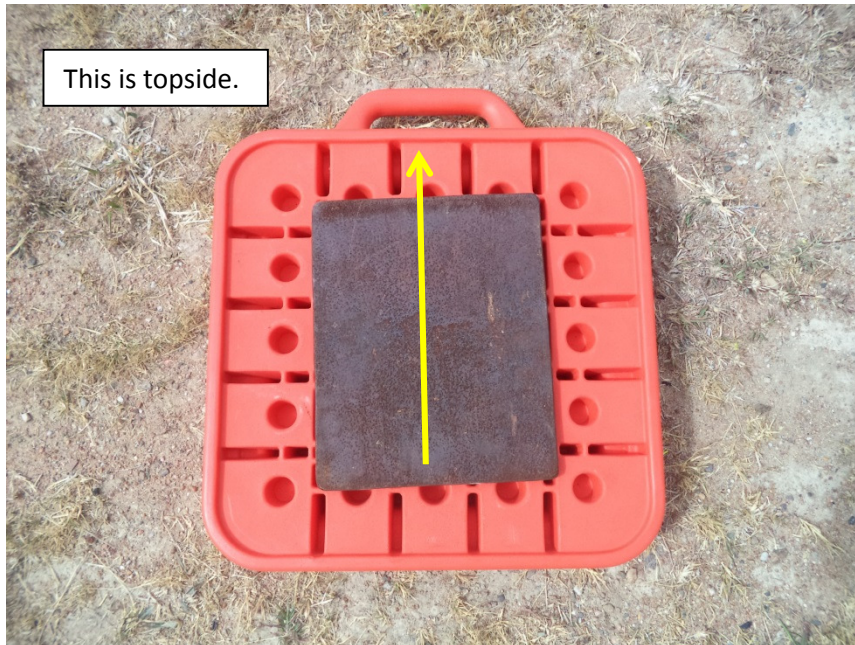

**Optimal foot-plate position. (centred, handle facing short edge of plate)**

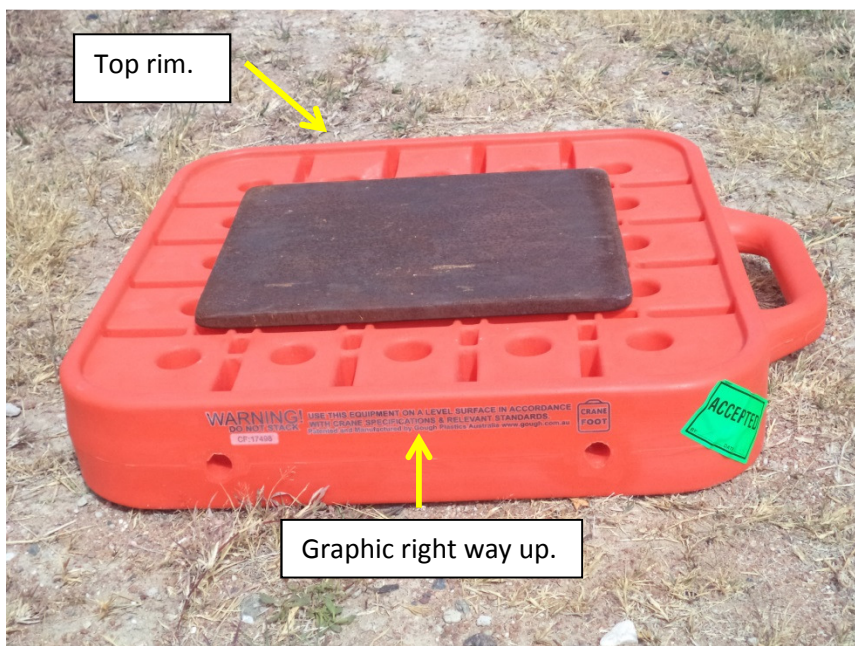 

**Designed to be used this way up.**



**Pad should be rotated 90 degrees to optimal position.  
Handle should be facing short edge of plate.**



**Do not sit across kerb or span across any other obstructions.  
Pad must be level, and base must be fully supported underneath.**



**Not designed to be used upside down. (See graphic is upside down)  
No top rim.**



**Foot-plate is not centred on the pad.  
Loading will be uneven.**



**Foot-plate is not centred on the pad.  
Do not overhang foot-plate.**