



# 30L CHECKER PLATE UNDERBODY WATER TANK INSTALLATION INSTRUCTIONS

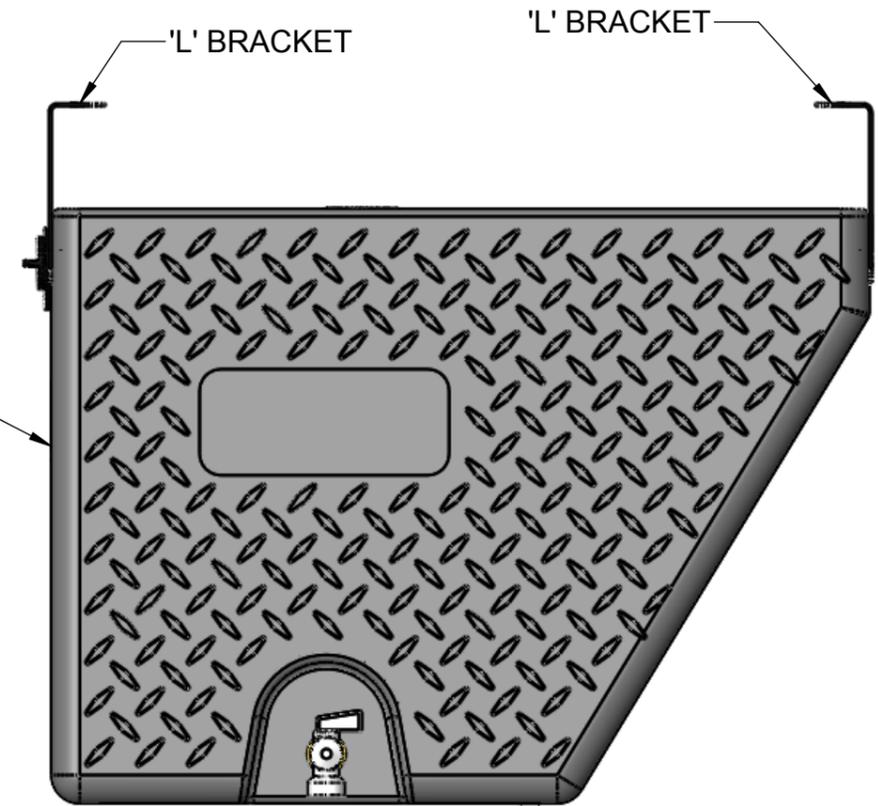

1. HOLD UP UNDERBODY WITH BRACKETS AND MARK HOLE LOCATIONS
2. DRILL  $\phi$  12 HOLES FOR BOLTS OR PILOT HOLES FOR SCREWS
3. REMOVE BRACKETS FROM UNDERBODY AND FIX TO TRAY WITH BOLTS OR SCREWS
4. LIFT TANK INTO PLACE AND FIX UNDERBODY TO 'L' BRACKETS WITH BOLTS AND SPRING WASHERS
5. BEND MUDGUARD BRACKET INTO PLACE AND FIX TO UNDERSIDE OF UNDERBODY WITH BOLT AND SPRING WASHER (WHERE APPLICABLE)

No.	DATE	BY	REVISION DESCRIPTION	APPROV.
A		TL	DESCRIPTION	

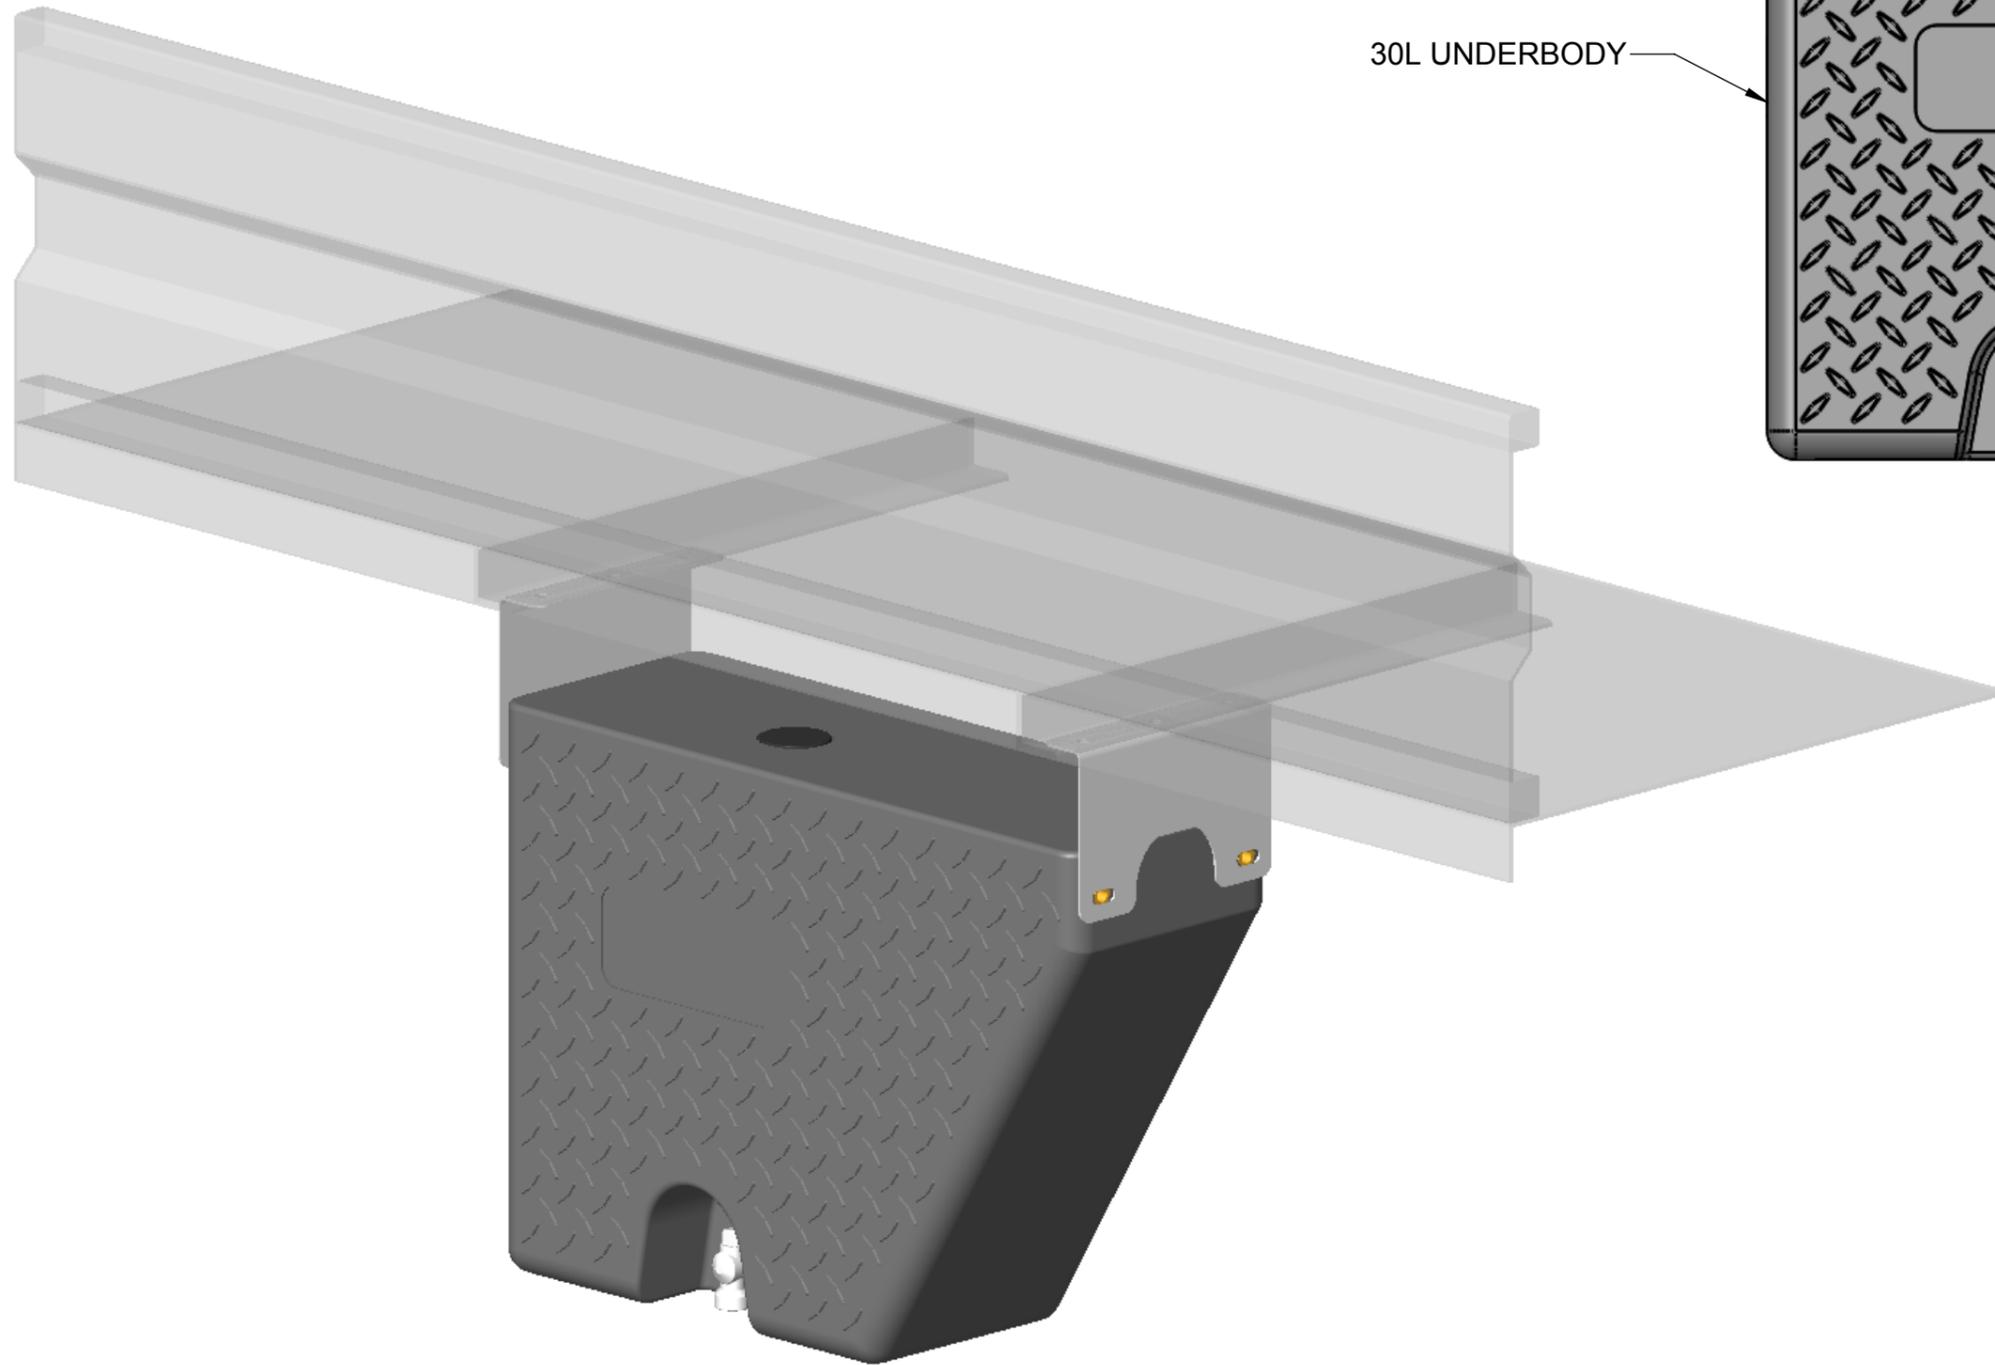


Gough Industries Pty. Ltd.  
833 Ingham Road  
Bohle, Townsville  
P.O. Box 7570, Garbutt BC, Qld. 4814.  
Telephone 07 47747606  
Facsimile 07 47747608  
A.C.N. 010 028 547

DRAWN	Signature T.LYNCH	Date 24.07.12	30L UNDERBODY INSTALL INSTRUCTIONS	
DRN. CHK			SCALE	<b>DOM-U11-001.01</b>
APPROVED			<b>A3</b>	
			S:\Product Development\Proposed New Products\Underbody Chequer Plate\	


A

REV

# 30L CHECKER PLATE UNDERBODY TOOLBOX INSTALLATION INSTRUCTIONS

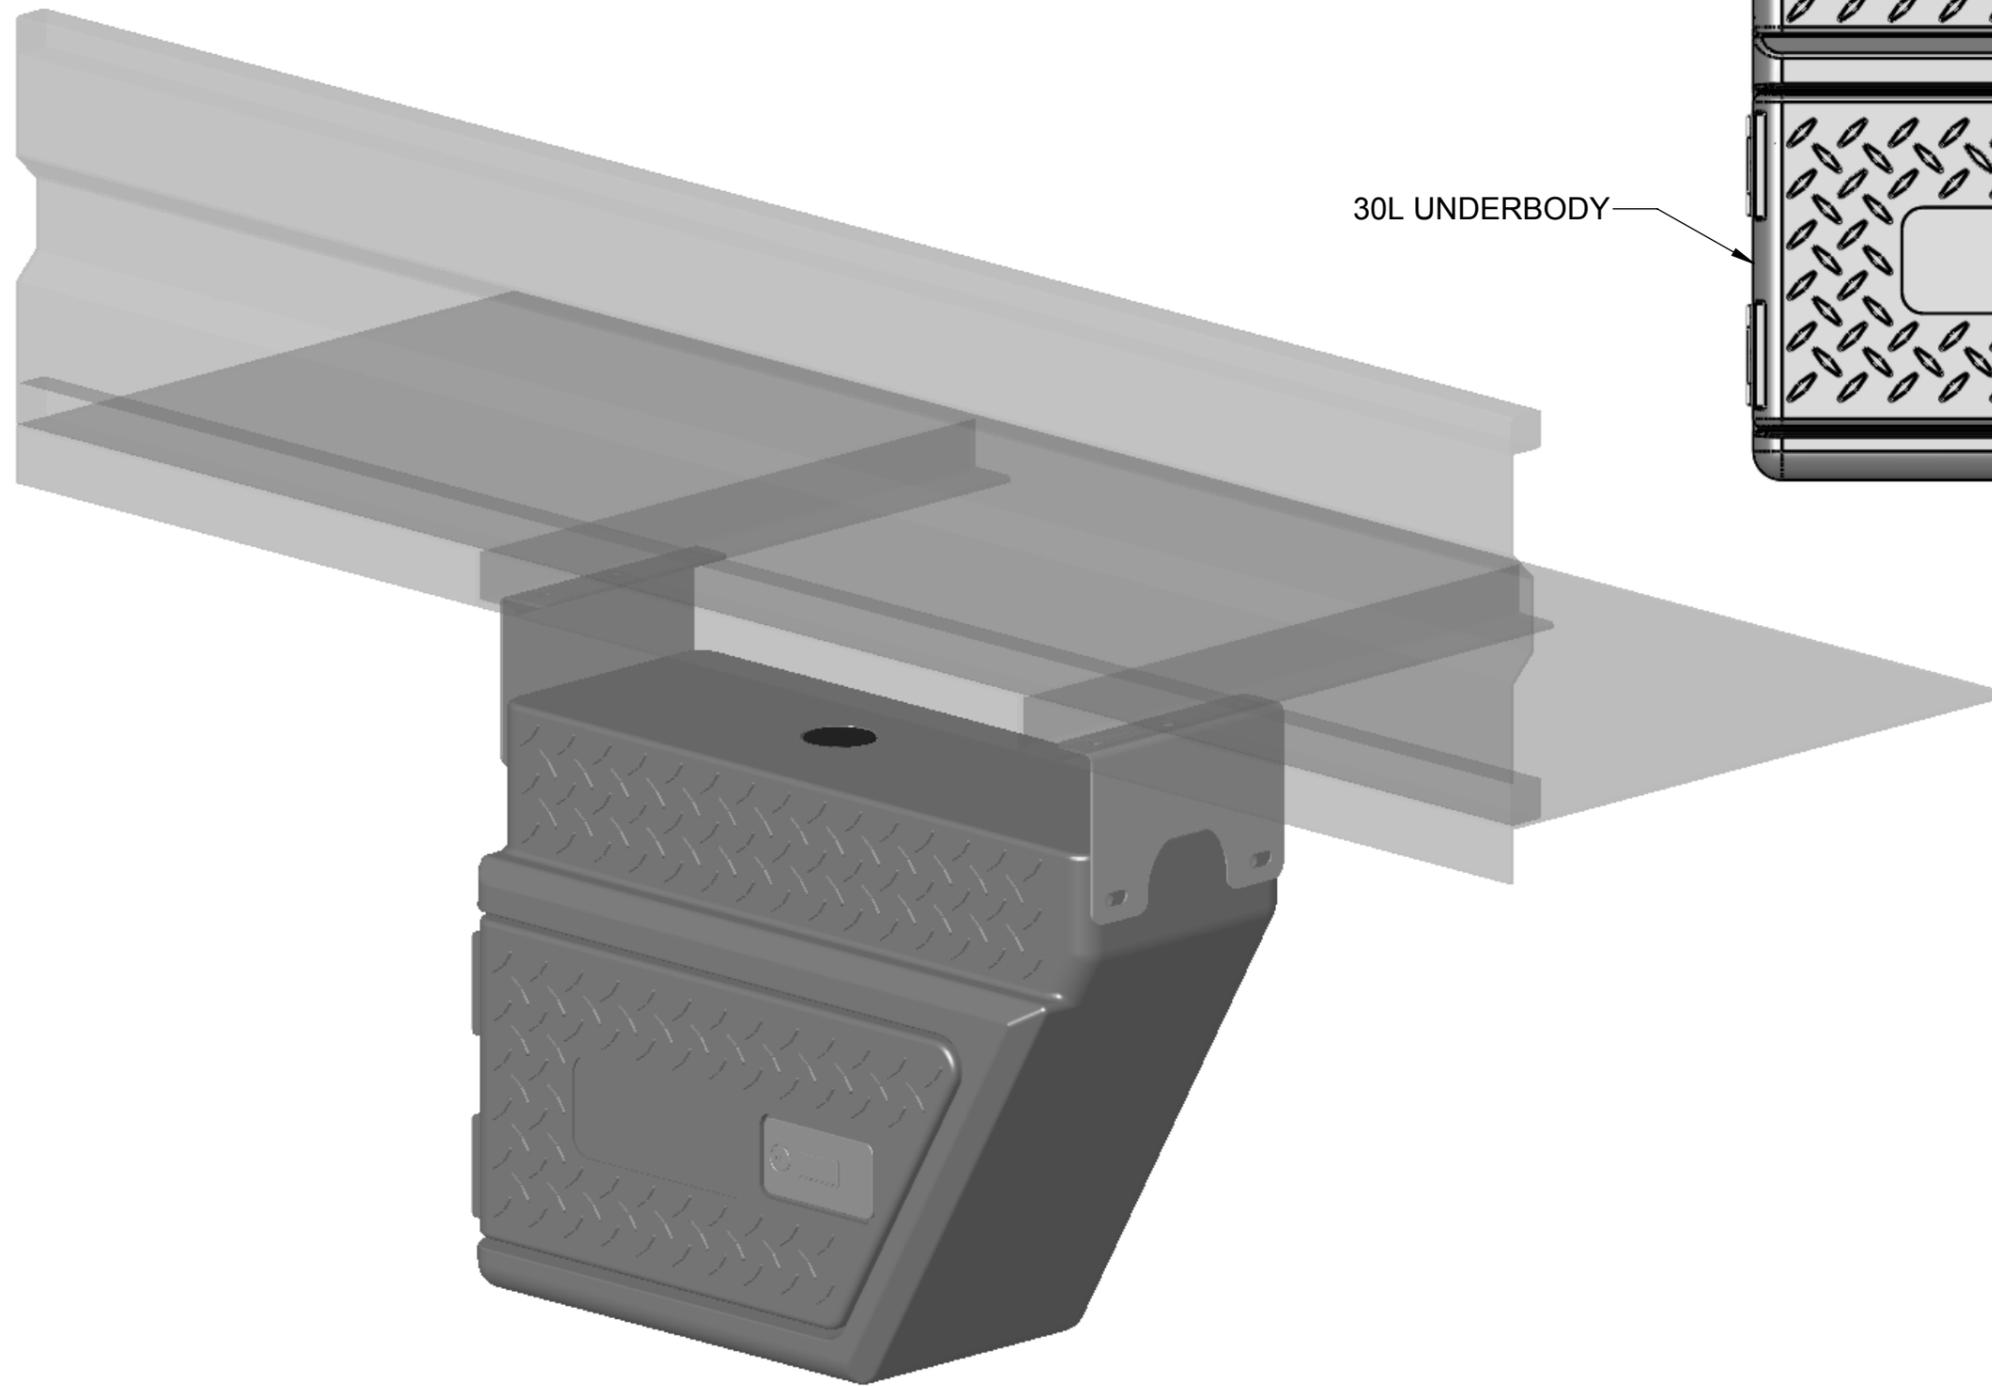

30L UNDERBODY

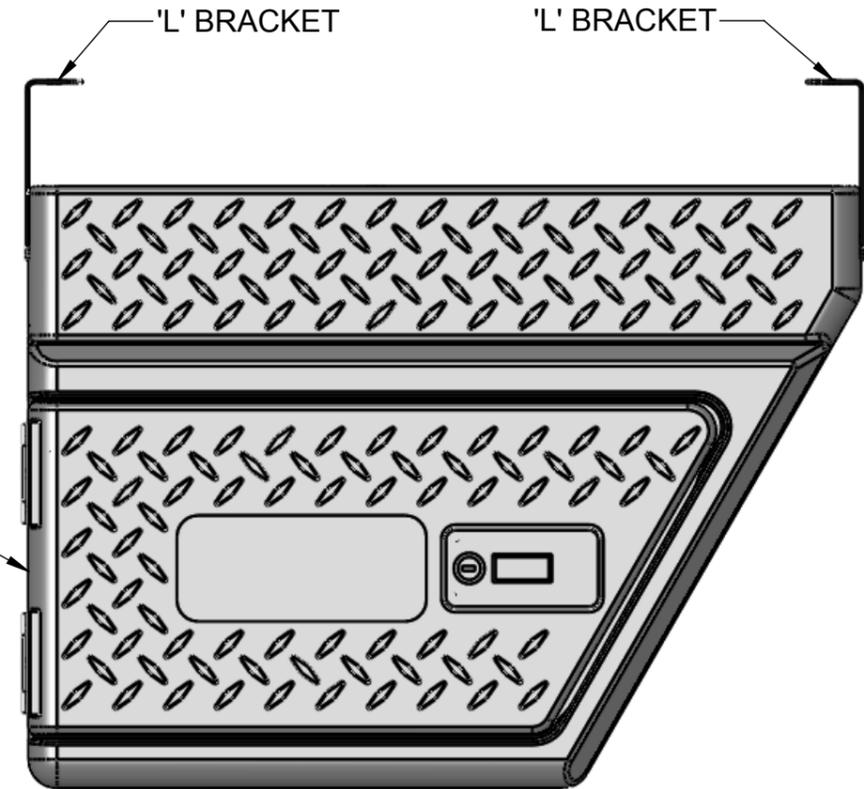

1. HOLD UP UNDERBODY WITH BRACKETS AND MARK HOLE LOCATIONS
2. DRILL  $\phi$  12 HOLES FOR BOLTS OR PILOT HOLES FOR SCREWS
3. REMOVE BRACKETS FROM UNDERBODY AND FIX TO TRAY WITH BOLTS OR SCREWS
4. LIFT TANK INTO PLACE AND FIX UNDERBODY TO 'L' BRACKETS WITH BOLTS AND SPRING WASHERS
5. BEND MUDGUARD BRACKET INTO PLACE DRILL  $\phi$  12 HOLE IN BOTTOM OF UNDERBODY AND FIX TO WITH BOLT AND SPRING WASHER (WHERE APPLICABLE)

No.	DATE	BY	REVISION DESCRIPTION	APPROV.
A		TL	DESCRIPTION	



Gough Industries Pty. Ltd.  
833 Ingham Road  
Bohle, Townsville  
P.O. Box 7570, Garbutt BC, Qld. 4814.  
Telephone 07 47747606  
Facsimile 07 47747608  
A.C.N. 010 028 547

DRAWN	Signature T.LYNCH	Date 24.07.12	30L UNDERBODY INSTALL INSTRUCTIONS	
DRN. CHK			SCALE	<b>DOM-UII-001.02</b>
APPROVED			<b>A3</b>	
			A	
S:\Product Development\Proposed New Products\Underbody Chequer Plate\				